

WATER PROTECTION ≡ SWIM/SURF



Crescendo

MESH[®] FILTERS HELP TO KEEP WATER OUT AND LET SOUND IN.

- For a carefree experience during water sports
- Designed to prevent large amounts of water into the ear canal
- Extra set of full block filters included
- Soft medical grade ear tips in 2 sizes
- Blocks water whilst situational awareness is preserved
- Reduce the risk of ear infection and surfer's ear



WATER PROTECTION

SWIM/SURF




PACKAGING SPECIFICATION

Material: FSC® certified paper
 Dimensions: 132 x 65 x 32 mm
 Weight: 40 g


PR-2383	This product can not be certified as hearing protection according to European standards (EN 352-2:2020).
Swim/Surf	

INCLUDES:

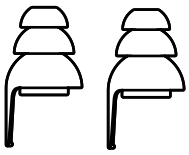

2 EAR TIPS LARGE

Nominal diameter: 7-12 mm
 Colour: Grey transparant
 Material: Medical TPE

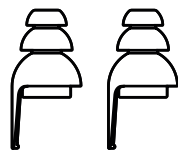


2 EAR TIPS MEDIUM

Nominal diameter: 6-11 mm
 Colour: Grey transparant
 Material: Medical TPE



2 MESH® + 2 FULL BLOCK FILTERS

Dimensions: Ø 6.5 x 3.5 mm
 Colour MESH®: Light Blue
 Colour Full Block: Blue

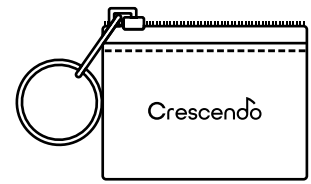

1 STORAGE POUCH

Dimensions: 60 x 45 mm
 Colour: Black

FEATURES:



SITUATIONAL AWARENESS

Retained spatial hearing and sound directionality, preserves situational awareness.



VENTILATION OF THE EAR

The open structure of the filter allows air into the ears.



COMFORT FIT

Ear tips of medical grade material.



NATURAL HEARING

Advanced acoustic filters provide natural sound transfer.

RANGE:



EVENTS
PR-2379



SLEEP
PR-2381



SWIM/SURF
PR-2383



WORK
PR-2385




TRAVEL
PR-2387



MOTO PRO
PR-2391



KIDS
PR-2393

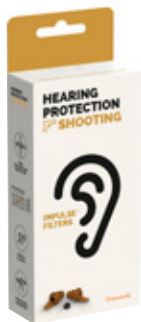

SHOOTING
PR-2599

HEARING PROTECTION

WHY CRESCENDO?




SPECIAL MESH® AND MEMBRANE® FILTERS

High-end MESH® and MEMBRANE® filters reduce loud sound and noise while keeping relevant sound and speech, therefore retaining situational awareness and communication.

Standard tube filters:

Average sound quality, attenuates mostly high frequencies.

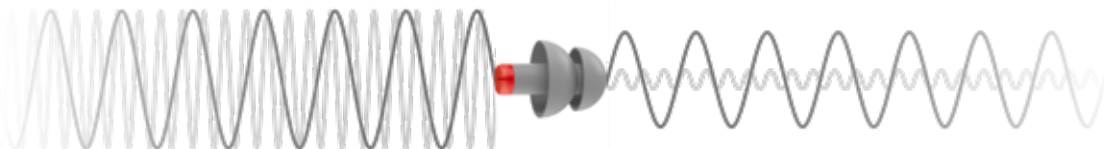


MESH® filters:

Very good sound quality, attenuates low and high frequencies more equally.



MEMBRANE® filters:

Excellent sound quality, attenuates low and high frequencies equally.

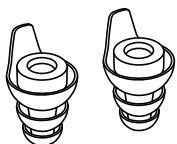

MEDICAL GRADE TPE EAR TIPS

Our ear tips are made of a medical grade TPE. This material is designed to meet the strict requirements of medical devices for use in the human body and are free from PVC, phthalates, BPA, latex and oil, offering a safer and more comfortable replacement for materials such as silicone, flexible PVC and Polyurethane.



100% QUALITY CHECK

We guarantee the performance of your Hearing Protection as we carried out a 100% final acoustical test on the filters. When correctly fitted you can be certain that you will receive the protection level as stated on the packaging.



COMPLIANCE

Crescendo Hearing Protection complies with PPE regulation EU 2016/425, developed and manufactured to ISO 9001:2015 at our certified production facilities in the Netherlands.



ECO FRIENDLY PACKAGING

Packaging manufactured from FSC® certified paper and produced CO₂ neutral in the Netherlands.



DYNAMIC EAR COMPANY

Crescendo is a brand of Dynamic Ear Company B.V. Dynamic Ear Company B.V. develops and manufactures innovative hearing protection, personal audio and sound management solutions for industry, military, leisure and musicians.



SONOVA GROUP

Dynamic Ear Company is part of the Sonova group. Sonova is a global leader in innovative hearing care solutions: from personal audio devices and wireless communication systems to audiological care services, hearing aids, cochlear implants and hearing protection.