

HEARING PROTECTION WORK



Crescendo

PROTECTION FOR CONSTRUCTION AND MACHINERY USE.



- Special MESH® filters maintain speech clarity
- Appropriate attenuation for noisy work environments
- Soft medical grade ear tips in 2 sizes
- Reusable and washable
- Certified Personal Protection Equipment
- For both professional and hobby use

HEARING PROTECTION

WORK




PACKAGING SPECIFICATION

Material: FSC® certified paper
 Dimensions: 132 x 65 x 32 mm
 Weight: 40 g


CE Certification Data PR-2385	SNR	H	M	L
Work	24 dB	24 dB	22 dB	21 dB

INCLUDES:

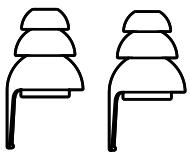

2 EAR TIPS LARGE

Nominal diameter: 7-12 mm
 Colour: Grey transparant
 Material: Medical TPE

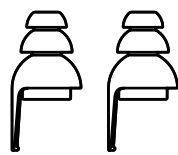


2 EAR TIPS MEDIUM

Nominal diameter: 6-11 mm
 Colour: Grey transparant
 Material: Medical TPE



2 MESH® FILTERS

Dimensions: Ø 6.5 x 3.5 mm
 Colour: Red

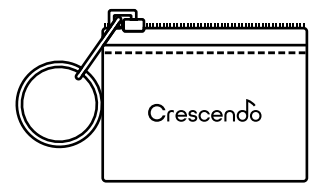

1 STORAGE POUCH

Dimensions: 60 x 45 mm
 Colour: Black

FEATURES:



SOUND REDUCTION

Helps to prevent hearing damage by reducing sound to safer levels.




COMFORT FIT

Ear tips of medical grade material.



VENTILATION OF THE EAR

The open structure of the filter allows air into the ears.

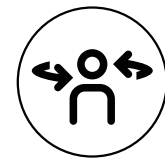


SITUATIONAL AWARENESS

Retained spatial hearing and sound directionality, preserves situational awareness.

RANGE:



EVENTS
PR-2379

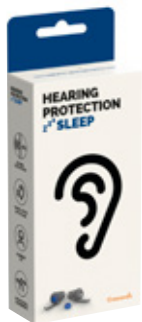

SLEEP
PR-2381



SWIM/SURF
PR-2383



WORK
PR-2385




TRAVEL
PR-2387



MOTO PRO
PR-2391



KIDS
PR-2393

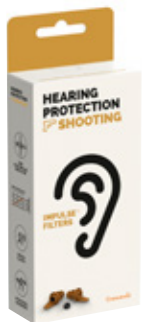

SHOOTING
PR-2599

HEARING PROTECTION

WHY CRESCENDO?




Standard tube filters:

Average sound quality, attenuates mostly high frequencies.

SPECIAL MESH® AND MEMBRANE® FILTERS

High-end MESH® and MEMBRANE® filters reduce loud sound and noise while keeping relevant sound and speech, therefore retaining situational awareness and communication.

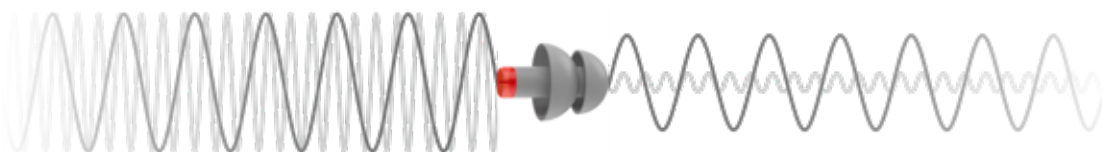


MESH® filters:

Very good sound quality, attenuates low and high frequencies more equally.



MEMBRANE® filters:

Excellent sound quality, attenuates low and high frequencies equally.

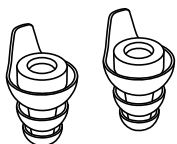

MEDICAL GRADE TPE EAR TIPS

Our ear tips are made of a medical grade TPE. This material is designed to meet the strict requirements of medical devices for use in the human body and are free from PVC, phthalates, BPA, latex and oil, offering a safer and more comfortable replacement for materials such as silicone, flexible PVC and Polyurethane.



100% QUALITY CHECK

We guarantee the performance of your Hearing Protection as we carried out a 100% final acoustical test on the filters. When correctly fitted you can be certain that you will receive the protection level as stated on the packaging.



COMPLIANCE

Crescendo Hearing Protection complies with PPE regulation EU 2016/425, developed and manufactured to ISO 9001:2015 at our certified production facilities in the Netherlands.



ECO FRIENDLY PACKAGING

Packaging manufactured from FSC® certified paper and produced CO₂ neutral in the Netherlands.



DYNAMIC EAR COMPANY

Crescendo is a brand of Dynamic Ear Company B.V. Dynamic Ear Company B.V. develops and manufactures innovative hearing protection, personal audio and sound management solutions for industry, military, leisure and musicians.



SONOVA GROUP

Dynamic Ear Company is part of the Sonova group. Sonova is a global leader in innovative hearing care solutions: from personal audio devices and wireless communication systems to audiological care services, hearing aids, cochlear implants and hearing protection.