

**HEARING  
PROTECTION**  
 **MOTO PRO**



Crescendo

**HELPS  
PREVENT  
HEARING  
DAMAGE  
AND  
FATIGUE  
FROM  
WIND NOISE.**

- Special MESH® filters retain directionality and speech
- Soft medical grade ear tips in 2 sizes
- Comfortable to wear under the helmet
- Suitable for navigation system users
- Long lasting and fully washable
- For a relaxed arrival at your destination

# HEARING PROTECTION

## MOTO PRO




### PACKAGING SPECIFICATION

Material: FSC® certified paper  
 Dimensions: 132 x 65 x 32 mm  
 Weight: 40 g


CE Certification Data   PR-2379	SNR	H	M	L
Moto Pro Sports	24 dB	24 dB	22 dB	21 dB
Moto Pro Touring	16 dB	17 dB	14 dB	12 dB

### INCLUDES:

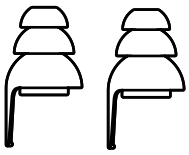

#### 2 EAR TIPS LARGE

Nominal diameter: 7-12 mm  
 Colour: Black  
 Material: Medical TPE

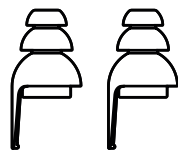


#### 2 EAR TIPS MEDIUM

Nominal diameter: 6-11 mm  
 Colour: Black  
 Material: Medical TPE



#### 2x2 MESH® FILTERS

Dimensions: Ø 6.5 x 3.5 mm  
 Colour Sports: Red  
 Colour Touring: Orange

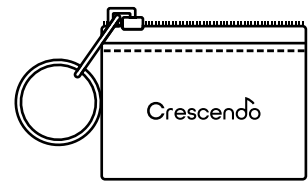

#### 1 STORAGE POUCH

Dimensions: 60 x 45 mm  
 Colour: Black

### FEATURES:



#### SOUND REDUCTION

Helps to prevent hearing damage by reducing sound to safer levels.



#### NATURAL HEARING

Advanced acoustic filters provide natural sound transfer.



#### SPEECH CLARITY

Improves communication, by suppressing background noise.



#### SITUATIONAL AWARENESS

Retained spatial hearing and sound directionality, preserves situational awareness.

### RANGE:



**EVENTS**  
PR-2379



**SLEEP**  
PR-2381



**SWIM/SURF**  
PR-2383



**WORK**  
PR-2385




**TRAVEL**  
PR-2387



**MOTO PRO**  
PR-2391



**KIDS**  
PR-2393

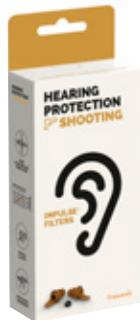

**SHOOTING**  
PR-2599

# HEARING PROTECTION

## WHY CRESCENDO?




### SPECIAL MESH® AND MEMBRANE® FILTERS

High-end MESH® and MEMBRANE® filters reduce loud sound and noise while keeping relevant sound and speech, therefore retaining situational awareness and communication.

#### Standard tube filters:

Average sound quality, attenuates mostly high frequencies.

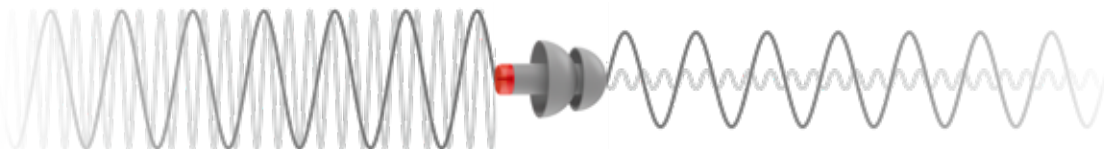


#### MESH® filters:

Very good sound quality, attenuates low and high frequencies more equally.



#### MEMBRANE® filters:

Excellent sound quality, attenuates low and high frequencies equally.

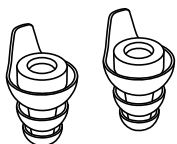

### MEDICAL GRADE TPE EAR TIPS

Our ear tips are made of a medical grade TPE. This material is designed to meet the strict requirements of medical devices for use in the human body and are free from PVC, phthalates, BPA, latex and oil, offering a safer and more comfortable replacement for materials such as silicone, flexible PVC and Polyurethane.



### 100% QUALITY CHECK

We guarantee the performance of your Hearing Protection as we carried out a 100% final acoustical test on the filters. When correctly fitted you can be certain that you will receive the protection level as stated on the packaging.



### COMPLIANCE

Crescendo Hearing Protection complies with PPE regulation EU 2016/425, developed and manufactured to ISO 9001:2015 at our certified production facilities in the Netherlands.



### ECO FRIENDLY PACKAGING

Packaging manufactured from FSC® certified paper and produced CO<sub>2</sub> neutral in the Netherlands.



### DYNAMIC EAR COMPANY

Crescendo is a brand of Dynamic Ear Company B.V. Dynamic Ear Company B.V. develops and manufactures innovative hearing protection, personal audio and sound management solutions for industry, military, leisure and musicians.



### SONOVA GROUP

Dynamic Ear Company is part of the Sonova group. Sonova is a global leader in innovative hearing care solutions: from personal audio devices and wireless communication systems to audiological care services, hearing aids, cochlear implants and hearing protection.